


# AQUACHECK® D.S.

MULTI-PURPOSE DRAINAGE SYSTEM

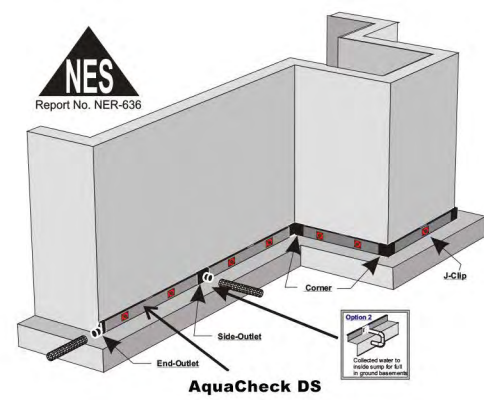

## DS Foundation Wall Installation Instructions

**1 STEP ONE**  
Clean off footer.



**2 STEP TWO**  
Apply waterproofing membrane.



**3 STEP THREE**  
Unroll DS, place against foundation wall on footer.



**4 STEP FOUR**  
Feed DS through stoop box.



**5 STEP FIVE**  
Attach AquaCheck DS Fittings: Determine location for all applicable DS fittings (shown in pictures). Cut DS to proper length between fittings (allow for extra length for insertion into fittings). Insert DS completely into fittings. Tape fittings with AquaCheck Tape. Note: Attach and tape 4" pipe to end/side outlet fitting to carry water to sump pump or daylight.



**6 STEP SIX**  
Nail AquaCheck DS to Wall with AquaCheck Clip: Nail Clip every 8 - 10 feet on either side of fittings.



**7 STEP SEVEN**  
Ready to backfill.

