



TRURIDGE

CONTINUOUS RIDGE VENT

INSTALLATION INSTRUCTIONS

TruRidge must always be installed with soffit vents of equal or greater area.

When installing TruRidge, all other vent openings (except soffits) should be closed off.

The slot cut in the roof ridge should not be cut closer than 12 inches of any junction point such as intersecting roof ridge, chimney, gable or other obstructions. Total slot width must not exceed 1.5 inches (3/4 of an inch on either side).

When installing vent in cold weather, leave 1/8 inch gap between vent sections to allow expansion in hot weather.


Install vent over entire length of ridge.

TruRidge is designed for varying roof pitches (3/12 through 16/12).

When using dimensional shingles, add one half shingle (non-tab portion) on the last tier to equal the same thickness as the tab, so ridge vent lies flush on shingles.


Nails must penetrate through roof deck.

HAND NAIL ONLY. MUST HAVE BALANCED VENTILATION SYSTEM. SOFFIT INTAKE SHOULD EQUAL RIDGE EXHAUST.

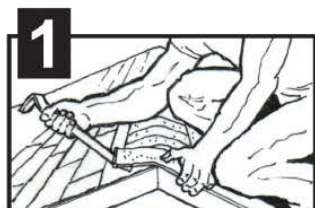

Remove ridge cap shingles from the entire length of the ridge.

NEW CONSTRUCTION: SKIP THIS STEP (1)

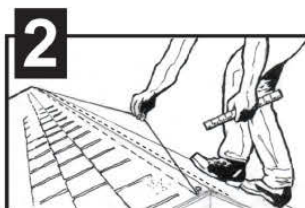

Snap chalk line on both sides of the ridge, no more than .75 (3/4) inch from peak.



Cut along chalk lines. Remove roof sheathing. **NOTE:** Slot should not be cut any closer than within 12 inches of gable end, hip intersecting ridge.




For appearance (blend roof line) it is recommended that Ridge Vent be installed the entire length of ridge, using two roofing nails, anchor vent through pre-formed nail holes.



Nail each additional section in same manner until entire ridge is covered. May utilize chalk line to ensure alignment. Cut last piece to length and install uncut end to outside.




Install new ridge cap using two roofing nails. Nailing cap through vent along the nailing line will secure vent. Shingles may need trimmed. Nails must penetrate deck.

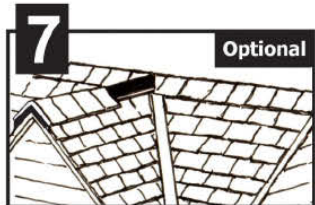

Optional

RIDGE TO RIDGE APPLICATION requires a mitre cut to maintain continuous ridge appearance.

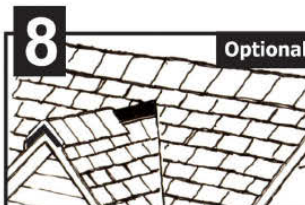

Optional

RIDGE TO ROOF APPLICATION requires mitre cut to maintain continuous ridge appearance.

For safety, always wear safety glasses.

Application and installation procedures are beyond the control of the seller or manufacturer. (Consequently, neither party shall be responsible for failure of the product when not used in strict accordance to instructions and specifications.)